RF Antenna Weatherproofing Instructions

Use the following weatherproofing instructions to seal and protect RF antenna connections for all exterior antenna and access point installations.

Recommended weatherproofing materials:

- Rubber (butyl) sealing tape
- Electrical tape

Weatherproofing Instructions:

1. Wrap rubber sealing tape around the connection between the antenna and the mounting base.

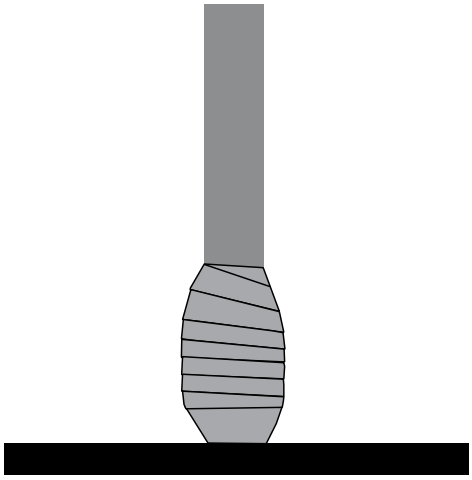

2. Ensure that the rubber tape seals the entire connection and extends one (1) inch inch beyond the antenna connector/cable assembly.

3. Wrap a layer of electrical tape in the opposite direction of the rubber tape wrap.

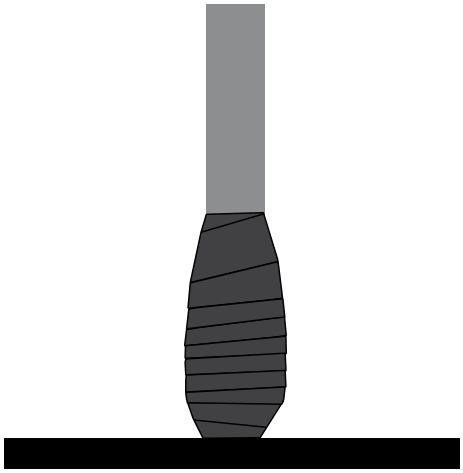

4. Ensure that the electrical tape extends one (1) inch beyond the rubber tape.

Information in this guide is subject to change without notice. © May 2011 | Seon Design Inc. | All rights reserved. www.seon.com
Part Number: 700-0138 R001