



Explorer® MX4 Basic and Plus Mobile Digital Video Recording System

User Guide



Document Part Number 700-0075 R001

Who This Guide is For

The User Guide is intended for anyone who needs to operate, configure or troubleshoot the Explorer MX4 Basic and Plus Mobile Digital Video Recording (DVR) System. In this guide, both the MX4 Basic and MX4 Plus are referred to as Explorer MX4. The individual models are referred to as MX4 Basic and MX4 Plus.

Related user guides include:

- Explorer® MX4 Basic and Plus Mobile Digital Video Recording (DVR) System Installation and Quick Configuration Guide, 700-0077
- vMax Video Management Software User Guide, 700-0036

Conventions Used



CAUTION

Cautions identify conditions or practices that could result in damage to the unit or other equipment.

Recommendation: These notes provide tips for optimum performance of the DVR system.

Important: These notes provide important information, which are not as serious as a Caution.

Abbreviations and Acronyms

Acronym	Definition	Acronym	Definition
DVR	Digital video recorder	LAN	Local area network
FPS	Frames per second	MPEG	Moving Picture Experts Group
GPS	Global Positioning System	RA	Return Authorization
HD	Hard drive	TCM	Transmission Control Module
HDD	Hard disk drive	TCP/IP	Transmission Control Protocol/ Internet Protocol
IPS	Images per second	UTC	Universal Time Coordinated
IR	Infrared	USB	Universal Serial Bus

Finding Information Online

You can find more information about Seon Design Inc. as well as its products and services at www.seon.com.

Contents

Chapter 1 Introduction

1.1. MX4 Product Features	1-1
1.2. Explorer MX4 System	1-1
1.3. Explorer MX4	1-2
1.3.1. DVR Front Panel Features	1-2
1.3.2. DVR Back Panel Features	1-3
1.3.3. Trackball mouse	1-4
1.3.4. Remote Control (optional)	1-4

Chapter 2 Configuration

2.1. Configuring the DVR	2-1
2.2. MX4 On Screen Configuration Main Menu	2-3
2.2.1. Time and Date Menu	2-4
2.2.1.1. DST (Daylight Savings Time) Settings	2-5
2.2.2. Titles and Display Menu	2-5
2.2.2.1. Monitor Settings	2-6
2.2.2.2. Diagnostic Display	2-7
2.2.3. Alarms and Signals Menu	2-7
2.2.3.1. Alarm Settings	2-8
2.2.3.2. Signals 1 to 5	2-9
2.2.3.3. Signals 6 to 10	2-10
2.2.3.4. Speed Settings	2-11
2.2.3.5. GPS Settings	2-12
2.2.4. Recording Settings Menu	2-13
2.2.4.1. Camera Settings	2-14
2.2.4.2. Record 2 Settings	2-14
2.2.4.3. Timers Settings	2-15
2.2.5. Recording Capacity for Media Cartridge Storage	2-16
2.2.6. Network Settings Menu	2-17
2.2.6.1. User Levels	2-19
2.2.6.2. DDNS (Dynamic Domain Name Server) Settings	2-19
2.2.7. System Settings Menu	2-20
2.2.7.1. Program Update	2-21
2.2.7.2. E-mail Settings	2-21
2.2.7.3. One Touch Settings	2-22
2.2.8. Updating the Firmware	2-23

Chapter 3 Operation

3.1. Operating and Monitoring the DVR	3-1
3.2. Removing and Replacing the Media Cartridge	3-2
3.3. Viewing Recorded Video	3-3

Contents

3.3.1. Playback Menu ----- 3-3

3.4. Using the Search Function ----- 3-5

3.5. Using the Archive Function ----- 3-6

 3.5.1. Copy to USB ----- 3-8

3.6. Using One-Touch Download ----- 3-8

Chapter 4 Maintenance and Return

4.1. Returning Product for Service ----- 4-1

4.2. Troubleshooting the MX4 ----- 4-2

Appendix A Specifications

A.1. Explorer MX4 ----- A-1

 A.1.1. Advanced Smart-Temp™ ----- A-2

 A.1.2. Explorer MX4 Functional Features ----- A-2

 A.1.3. Explorer MX4 Front Cover, Cable Cover ----- A-2

 A.1.4. Smart-Link™ Module ----- A-2

Legal Notice

Seon Design® Inc. ----- L-1

Contact Information ----- L-1

Seon Design® Inc. Product Warranty

Disclaimer ----- W-1

Figures

Figure 1-1	Explorer MX4 Front Panel	1-2
Figure 1-2	DVR Back Panel Connectors	1-3
Figure 1-3	Trackball Mouse Pointing Device	1-4
Figure 1-4	Remote Control	1-4
Figure 1-5	Typical Basic System	1-6
Figure 1-6	Typical Plus System	1-7
Figure 1-7	Configuration Main Menu for On Screen Display and Web Browser	1-8
Figure 2-1	Explorer Splash Screen	2-1
Figure 2-2	On-screen Display during Live Viewing and Recording	2-2
Figure 2-3	Main Menu	2-3
Figure 2-4	Configuration Main Menu	2-3
Figure 2-5	Time and Date Menu	2-4
Figure 2-6	DST Settings Menu	2-5
Figure 2-7	Titles and Display Menu	2-5
Figure 2-8	Monitor Settings Menu	2-6
Figure 2-9	Diagnostic Display Menu	2-7
Figure 2-10	Alarms and Signals Menu	2-8
Figure 2-11	Alarm Settings Menu	2-8
Figure 2-12	Signals 1 to 5 Menu	2-9
Figure 2-13	Signals 6 to 10 Menu	2-10
Figure 2-14	Speed Settings Menu	2-11
Figure 2-15	GPS Settings Menu	2-12
Figure 2-16	Recording Settings Menu	2-13
Figure 2-17	Camera Settings Menu	2-14
Figure 2-18	Record 2 Settings Menu	2-15
Figure 2-19	Timer Settings Menu	2-15
Figure 2-20	Network Settings Menu	2-18
Figure 2-21	User Levels Menu	2-19
Figure 2-22	DDNS Settings Menu	2-19
Figure 2-23	System Settings Menu	2-20
Figure 2-24	Program Update Menu	2-21
Figure 2-25	Email Settings	2-21
Figure 2-26	One Touch Settings Menu	2-22
Figure 2-27	Updating DVR Firmware Dialog Box	2-23
Figure 3-1	MX4 Front Panel	3-1
Figure 3-1	Local Playback of Video using Monitor Attached to the DVR	3-3
Figure 3-2	Main Menu	3-3
Figure 3-3	Playback Tool Bar Window	3-4

Figures

Figure 3-4	Show/Hide Toolbar Icon-----	3-5
Figure 3-5	Search Menu -----	3-5
Figure 3-6	Archive Menu -----	3-7
Figure 3-7	Copy to USB Progress Bar-----	3-8
Figure 3-8	One-Touch Settings -----	3-9

Tables

Table 1-1	Front Panel Features	1-2
Table 1-2	Back Panel Features	1-3
Table 1-3	Trackball Mouse Features	1-4
Table 1-4	Remote Control Features	1-5
Table 2-1	On-screen Display Information	2-2
Table 2-2	Time and Date Configuration Items	2-4
Table 2-3	DST Settings Configuration Items	2-5
Table 2-4	Titles and Display Configuration Items	2-6
Table 2-5	Monitor Settings Configuration Items	2-6
Table 2-6	Diagnostic Display Configuration Items	2-7
Table 2-7	Alarm Settings Configuration Items	2-8
Table 2-8	Signals 1 to 5 Configuration Items	2-9
Table 2-9	Signals 6 to 10 Configuration Items	2-10
Table 2-10	Speed Settings Configuration Items	2-11
Table 2-11	GPS Settings Configuration Items	2-12
Table 2-12	Record Configuration Items	2-13
Table 2-13	Camera Settings Configuration Items	2-14
Table 2-14	Record 2 Settings Configuration Items	2-15
Table 2-15	Timer Settings 1-5 (identical for Timer 6 to 10)	2-16
Table 2-16	Estimated Recording Time in Hours with 160 GB Media Cartridge	2-17
Table 2-17	Estimated Recording Time in Hours with 500 GB Media Cartridge	2-17
Table 2-18	Network Settings Configuration Items	2-18
Table 2-19	User Levels Configuration Items	2-19
Table 2-20	DDNS Settings Configuration Items	2-20
Table 2-21	System Settings Configuration Items	2-20
Table 2-22	Program Update Configuration Items	2-21
Table 2-23	Email Settings Configuration Items	2-22
Table 2-24	One-Touch Setting Configuration Items	2-22
Table 3-1	Front Panel Features	3-1
Table 3-2	Playback Tool Bar Items	3-4
Table 3-3	Search Configuration Items	3-5
Table 3-4	Archive Configuration Items	3-7
Table 3-5	One-Touch Download Options	3-9
Table 4-1	Maintenance Tasks	4-1

CHAPTER 1

Introduction

This chapter describes the product features and components of the Explorer™ MX4 Basic and Plus Mobile Digital Video Recording System.

1.1. MX4 Product Features

- Rugged digital video recorder (DVR)
- MPEG-4 video compression
- Four audio channels and four video channels
- Dual stream recording (High resolution and real-time viewing)
- Geo-fencing uses GPS technology to designate a geographic boundary for the vehicle
- Programmable monitor output allows drivers to monitor events in hard to see areas in and around the vehicle in real time

1.2. Explorer MX4 System

The typical MX4 system consists of the following components (see Figure 1-5):

- Explorer MX4 DVR
- Cameras and camera cable, one connector per camera
- Trackball mouse
- Media cartridge with hard drive
- Alarm input switch and cable
- Power input harness with in-line fuses for constant and switched power lines

MX4 Plus consists of the following additional components (see Figure 1-6):

- Smart-Link™ module
- Cables and harnesses:
 - Ignition input harness
 - Power input harness with in-line fuses for constant and switched power lines
 - Alarms and signals harnesses
 - Speed harness
- Diagnostic indicator/alarm button (video recording label optional)
- GPS (Global Positioning System), optional

1.3. Explorer MX4

- Locking front cover accessible only to authorized personnel.
- Secure cable cover with slotted cable entries.
- Mounting patterns that can accommodate horizontal or vertical installation.

1.3.1. DVR Front Panel Features

The DVR front panel features are shown in Figure 1-1 and briefly described in Table 1-1. For a detailed description of the front panel features, see Table 3-1, “Front Panel Features” on page 3–1.

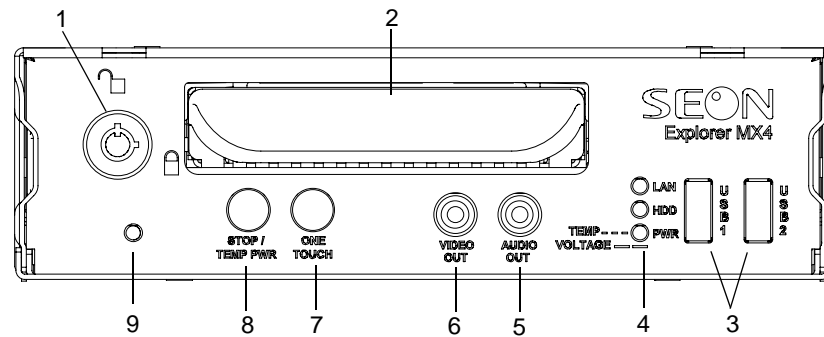


Figure 1-1 Explorer MX4 Front Panel

Table 1-1 Front Panel Features

Item	Feature	Item	Feature
1	MEDIA CARTRIDGE (HD) LOCK	5	AUDIO OUT
2	MEDIA CARTRIDGE	6	VIDEO OUT
3	USB1, USB2 PORTS	7	ONE TOUCH
4	LAN ACTIVITY, HDD ACTIVITY, PWR, TEMP, VOLTAGE	8	STOP/TEMP PWR

1.3.2. DVR Back Panel Features

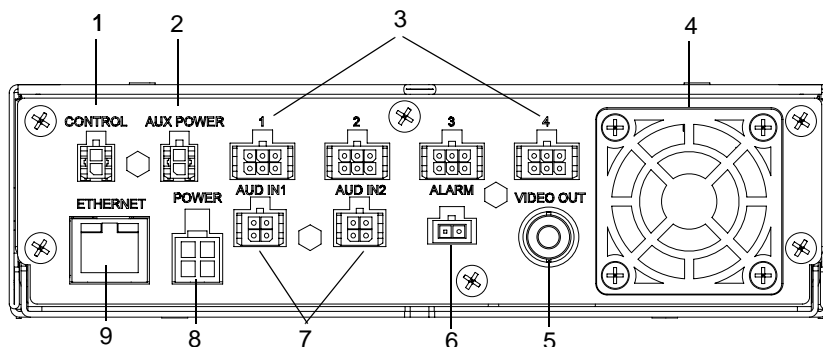


Figure 1-2 DVR Back Panel Connectors

Table 1-2 Back Panel Features

Item	Feature	Description
1	CONTROL	Control connector (2-pin) for controlling the Smart-Reach® Mobile wireless bridge equipment. See “Recording Settings Menu” on page 2–13.
2	AUX POWER	Auxiliary power connector (2-pin). Turns off after record delay settings. See “Recording Settings Menu” on page 2–13.
3	CAMERA1 TO CAMERA4	Four camera input connectors (6-pin)
4	FAN	Intake fan with filter and removable cover. See “Maintenance and Return” on page 4–1.
5	VIDEO OUTPUT	Configurable video output for viewing video.
6	ALARM	Alarm input connector for the alarm button and cable (2-pin).
7	AUD IN1, AUD IN2	Audio input connectors with power mapped to Audio Channels 1 and 2 (4-pin).
8	POWER	Power input connector (4-pin) for connecting the power harness.
9	ETHERNET (GIGABIT)	Ethernet port with RJ-45 connector for connecting to LAN. Ethernet is used to connect either to a PC or directly to the Smart-Reach wireless bridge and other equipment.

1.3.3. Trackball mouse



Figure 1-3 Trackball Mouse Pointing Device

Table 1-3 Trackball Mouse Features

Item	Description
1	Click to select the highlighted option using index finger.
2	Click to select the highlighted option using thumb control.
3	<ul style="list-style-type: none"> Delete a character entered into a field. Perform the function of the Back button.
4	Moves the cursor around the screen.

1.3.4. Remote Control (optional)

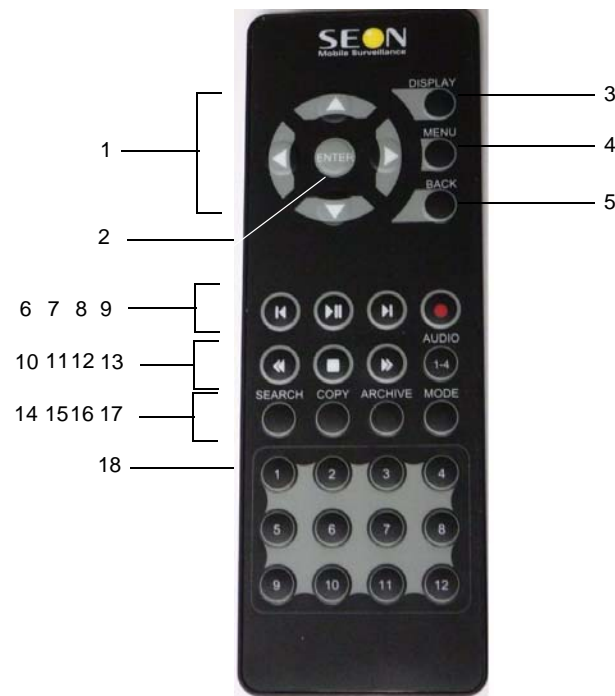


Figure 1-4 Remote Control

Table 1-4 Remote Control Features

Item	Button	Description
1	Menu navigation • Up arrow • Back arrow • Down arrow • Right arrow	In the Menu system: • Scrolls up one line of text or increases a selected value. • Navigates to a previous item. • Scrolls down one line of text or decreases a value. • Navigates to the next item.
2	ENTER	Displays the next screen or confirms the selection of a menu item.
3	DISPLAY	Selects the next on-screen display.
4	MENU	Enters and exits the Menu system to configure the DVR.
5	BACK	Return to the previous screen.
6	FRAME REVERSE	During video playback, reverses by a single frame when playback is paused.
7	PLAY/PAUSE	Plays back video or pauses video playback. In fast forward or reverse playback mode, press to return to normal playback.
8	FRAME ADVANCE	In playback with the video paused, advances by a single frame.
9	Record	Records video.
10	Fast rewind	Plays the video in reverse playback. Each press of the button increases the speed 2×, 4×, 8×, 16×, and 64×. When playback is paused, initiates 1/3 speed slow motion.
11	Stop	Stops recording.
12	Fast forward	Fast forwards video playback. Each press of the button increases the speed 2×, 4×, 8×, 16×, and 64×. When playback is paused, initiates 1/3 speed slow motion.
13	AUDIO	Selects the next audio channel during playback. There are four audio channels.
14	SEARCH	Activates the DVR search dialog.
15	COPY	Download specific data specified in the DVR's One-Touch setting menu. (Same function as the ONE TOUCH button on the DVR front panel.)
16	ARCHIVE	Opens the Archive dialog.
17	MODE	Cycles between individual and quad (4-up) channel display mode.
18	1–4	Selects Channel 1, 2, 3 or 4.
19	5–12	These buttons are for future use.

Introduction

Explorer® MX4 Typical Basic System Setup


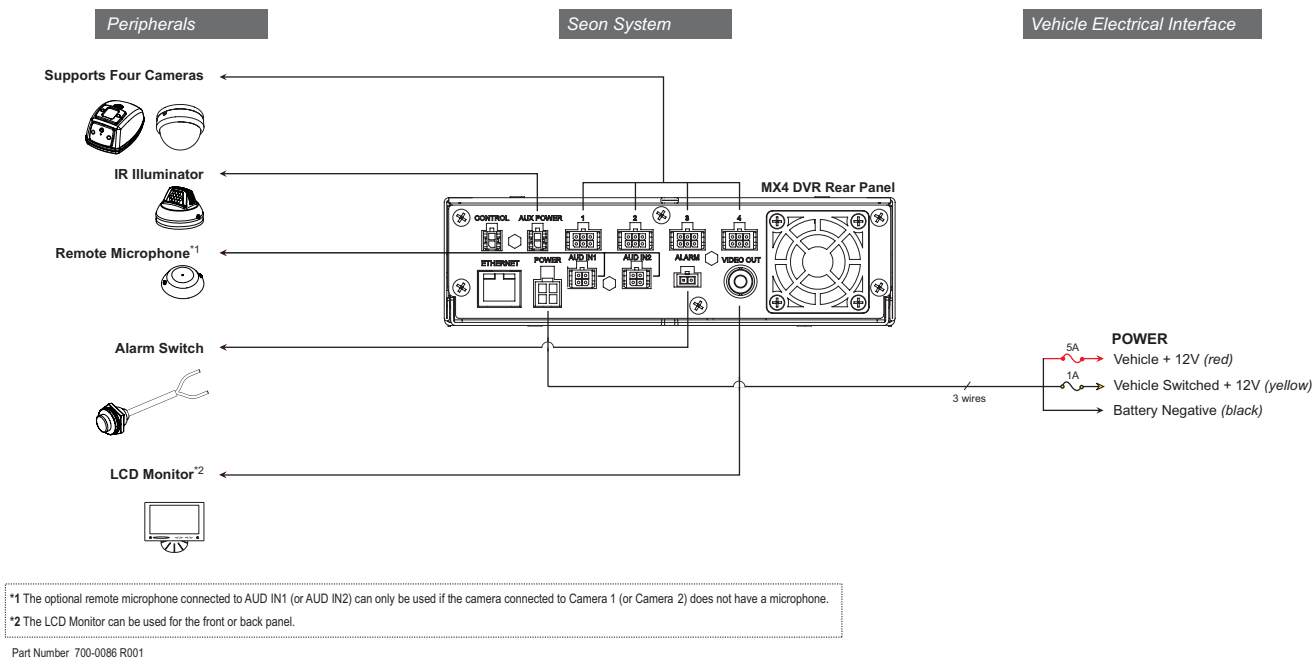


Figure 1-5 Typical Basic System

Explorer® MX4
Typical Plus System Setup

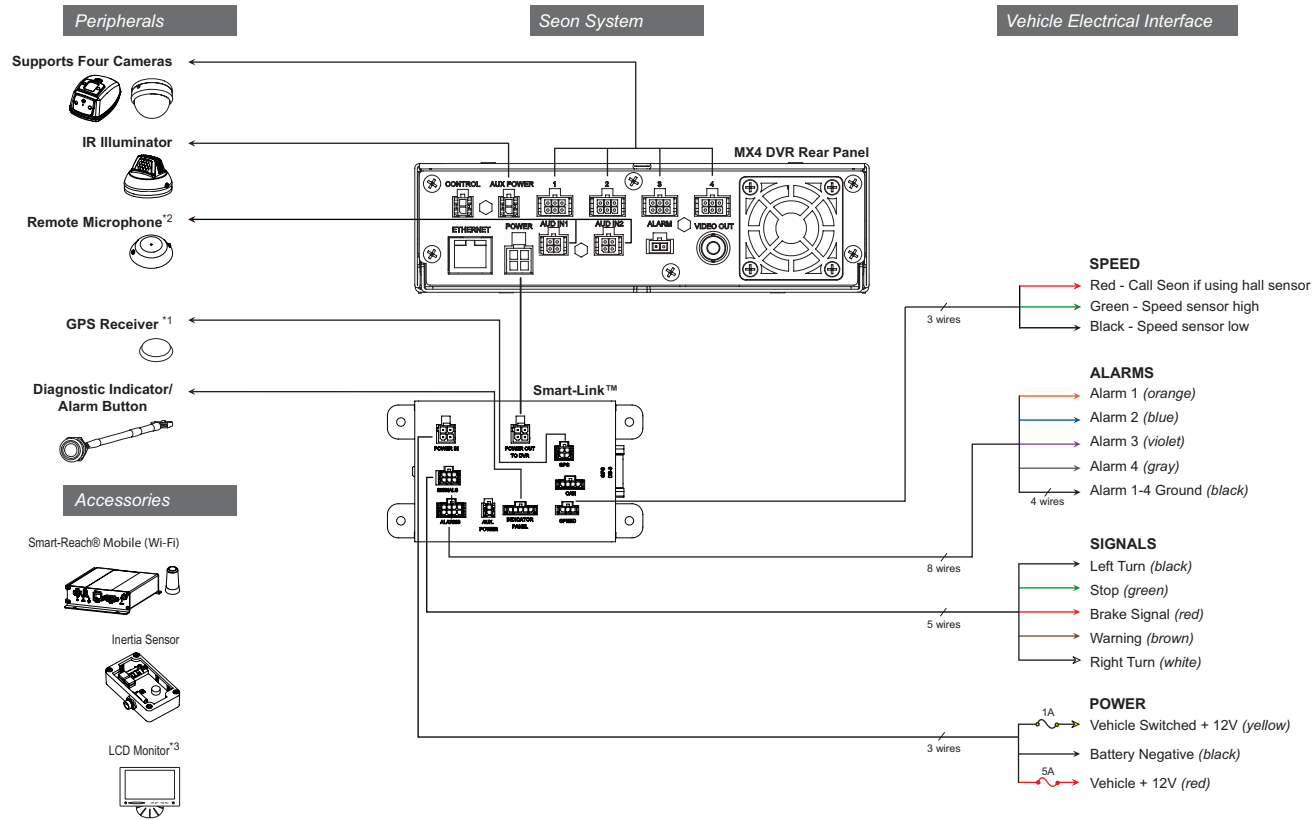

^{*1} For speed tracking, use a GPS receiver or speed sensor. For ease of installation and better speed tracking, Seon recommends using a GPS receiver.
^{*2} The optional remote microphone connected to AUD IN1 (or AUD IN2) can only be used if the camera connected to Camera 1 (or Camera 2) does not have a microphone.
^{*3} The LCD Monitor can be used for the front or back panel.

Part Number 700-0085 R001

Figure 1-6 Typical Plus System

Introduction

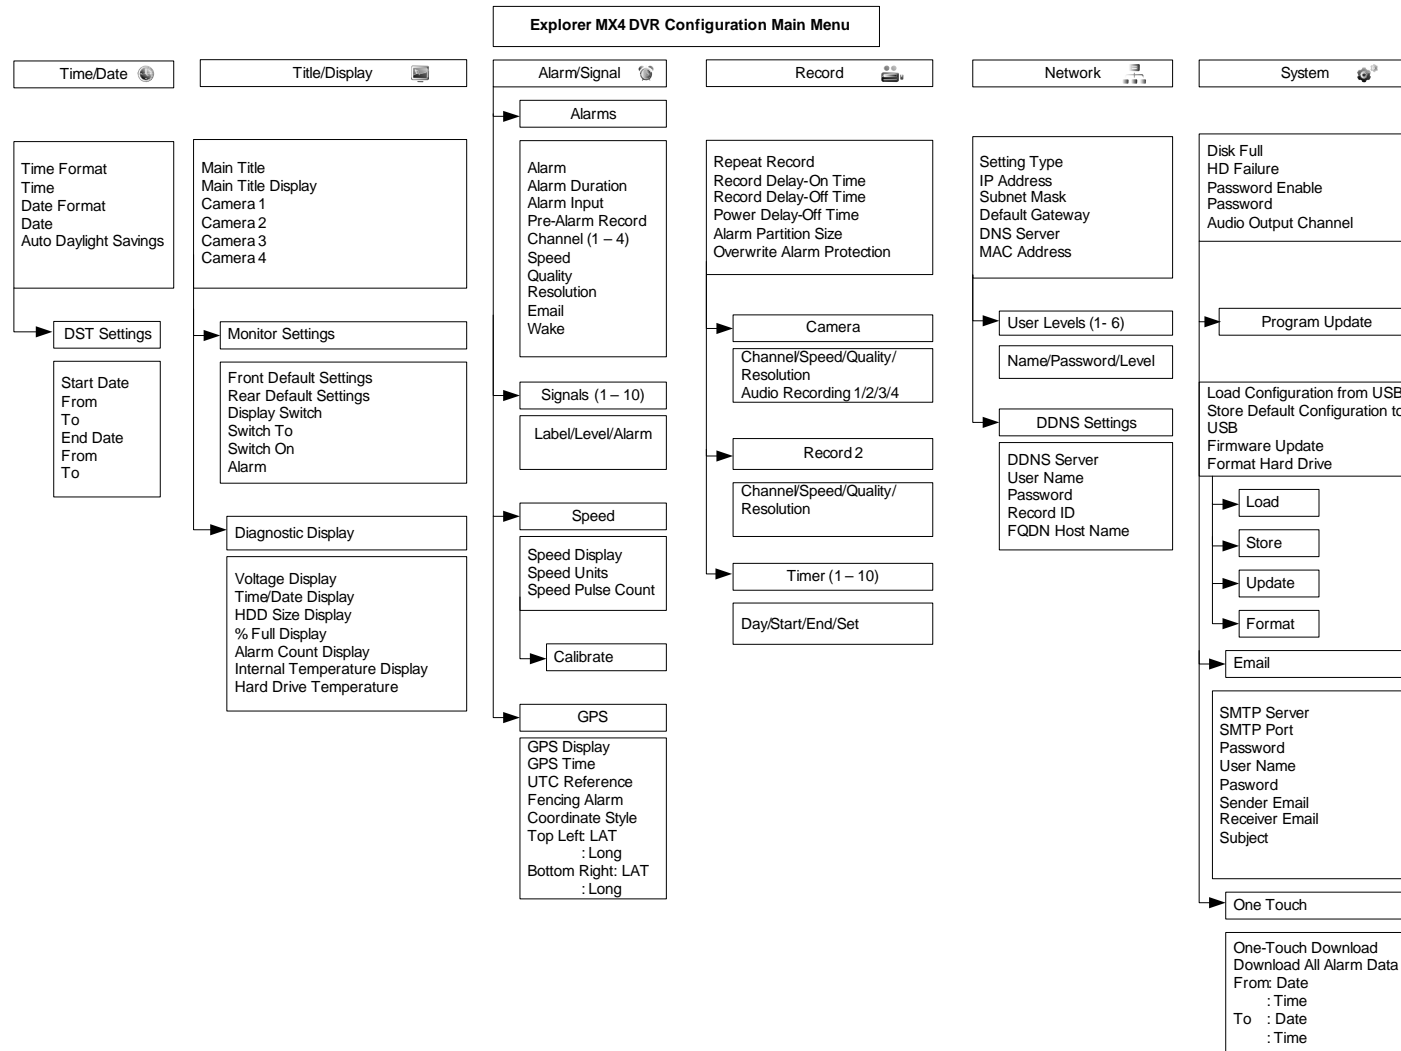


Figure 1-7 Configuration Main Menu for On Screen Display and Web Browser

CHAPTER 2

Configuration

This chapter provides information and procedures for configuring the DVR.

2.1. Configuring the DVR

The MX4 can be configured by two methods:

- On Screen Display (OSD) Configuration and Playback

Connect to the front panel VIDEO OUT with an LCD monitor and use the trackball pointing device or the remote control to configure Menu settings. For more information on the remote control or trackball mouse, see page 1–4.

- Web Browser Configuration and Playback

Web Browser Configuration and Playback uses an Ethernet connection with a laptop. See Explorer MX4 Basic and Plus Mobile DVR Installation and Quick Configuration Guide, document part number 700-0077.

The MX4 Configuration Main Menu shown in Figure 1-7 applies to the on screen display configuration and to the Web browser configuration.

The MX4 uses on screen configuring for easy setup of all the functions and controls. Upon start up, a splash screen briefly appears before the DVR enters live view.

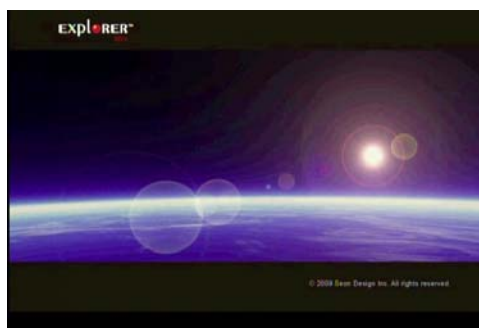


Figure 2-1 Explorer Splash Screen

During live viewing and recording, the information displayed on the screen can include the items shown in Figure 2-2 and described in Table 2-1.



Figure 2-2 On-screen Display during Live Viewing and Recording

Table 2-1 On-screen Display Information

Feature	Description
MAIN TITLE	Main title (maximum 32 characters)
CAMERA 1 TO CAMERA 4	Camera title (maximum 8 characters)
HD SIZE	Shows the formatted size for the media cartridge in gigabytes (GB).
HD USED	Shows how much of the media cartridge has been recorded.
VERSION	Indicates the DVR firmware version.
STATUS	Shows the operation status of the DVR. <ul style="list-style-type: none"> • RECORD (normal recording) • LIVE (live mode not recording) • PLAYBACK (the DVR is playing locally, displays RECORD, ALARM or TIMER) • V. LOSS (video loss or camera signal loss) • ALARM (alarm recording) • TIMER (when timer record is enabled)
SPEED DISPLAY	Shows the vehicle speed.
VOLTAGE	Shows the system voltage from 8 to 32 VDC.
TEMPERATURE	Shows the DVR temperature in degrees Fahrenheit or Celsius.
GPS	Identifies the latitude and longitude of the vehicle, if the GPS receiver is installed.
TIME AND DATE	Shows the date and time.
AC (ALARM COUNT)	Shows if an alarm has been triggered (1 to 9). Resets to 0 when the DVR is restarted.

2.2. MX4 On Screen Configuration Main Menu

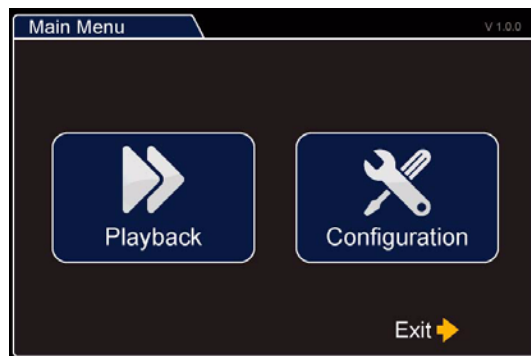


Figure 2-3 Main Menu

The Main Menu screen displays Playback and Configuration. To play back and archive video, see “Playback Menu” on page 3–3. Set the menu items using the DVR front panel buttons or the remote control.

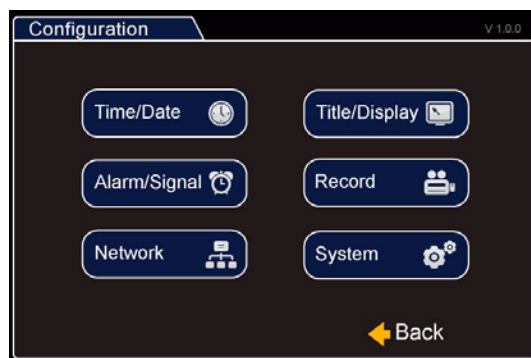


Figure 2-4 Configuration Main Menu

2.2.1. Time and Date Menu

Use the Time and Date menu to set the time and date settings and Auto Daylight Savings settings.



Figure 2-5 Time and Date Menu

Table 2-2 Time and Date Configuration Items

Menu Item	Description	Values [Default]
Time Format	Set the time in 12-hour or 24-hour format.	[12 Hour] 24 Hour
Time	Set the time for the DVR.	12:00 AM to 11:59 PM for 12 Hour format 00:00 to 23:59 for 24 Hour format
Date Format	Set the preferred date format.	[MM-DD-YYYY] DD-MM-YYYY YYYY-MM-DD
Date	Set the date for the DVR.	
Auto Daylight Saving	Auto Daylight Saving set to On automatically adjusts the internal clock to daylight saving time. As of the second Sunday in March 2007, the time springs forward from 2:00:00 AM to 3:00:00 AM. On the first Sunday in November, the time reverts to Standard Time by changing from 2:00:00 AM to 1:00:00 AM. The times and dates can be adjusted as required.	[On], Off

2.2.1.1. DST (Daylight Savings Time) Settings

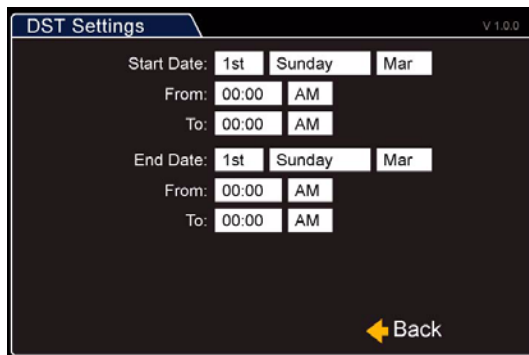


Figure 2-6 DST Settings Menu

Table 2-3 DST Settings Configuration Items

Menu Item	Description	Values [Default]
Start Date	Set the week, day, and month for daylight saving to start.	[2nd Sunday Mar]
From	Set the time for daylight saving to start.	[02:00 AM]
To	Set the time for daylight saving to end.	[03:00 AM]
End Date	Set the week, day, and month for daylight saving to end and return to Standard Time.	[1st Sunday Nov]
From	Set the time for daylight saving to start.	[02:00 AM]
To	Set the time for daylight saving to end.	[01:00 AM]

2.2.2. Titles and Display Menu

Use the Titles and Display menu to set the main title, camera titles, and other options.

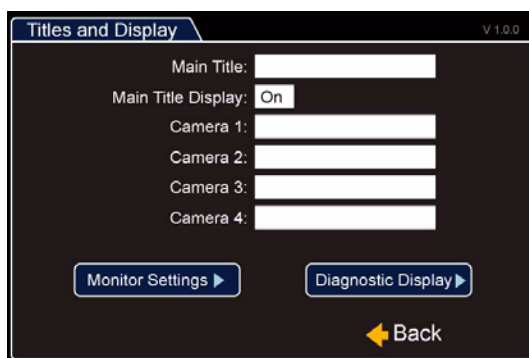


Figure 2-7 Titles and Display Menu

Table 2-4 Titles and Display Configuration Items

Menu Item	Description	Value [Default]
Main Title	Set a title.	[Main_Title] maximum 32 characters
Main Title Display	Show or hide the main title display.	[On], Off
Camera 1	Set a title.	[Camera01] maximum 8 characters
Camera 2	Set a title.	[Camera02] maximum 8 characters
Camera 3	Set a title.	[Camera03] maximum 8 characters
Camera 4	Set a title.	[Camera04] maximum 8 characters

2.2.2.1. Monitor Settings

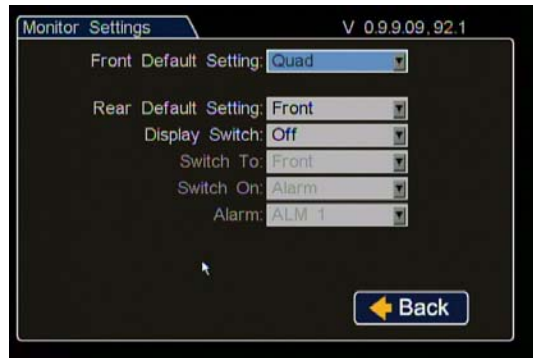


Figure 2-8 Monitor Settings Menu

Table 2-5 Monitor Settings Configuration Items

Menu Item	Description	Value [Default]
Front Default Setting	Set the view (after power up) for the monitor connected to VIDEO OUT on the front panel.	[Quad], CH 1, CH 2, CH 3, CH 4
Rear Default Setting	Set the view for a monitor connected to VIDEO OUT on the rear panel.	[Front], CH 1, CH 2, CH 3, CH 4, Off
Display Switch	Enables the rear monitor menu items: Switch To, Switch On, Alarm (Signal or Timer).	[Off], On
Switch To	Set the rear monitor view when Display Switch is set to On.	Front, CH1, CH2, CH3, CH4, Sequence
Switch On	Set the trigger that will make the rear monitor switch to the view selected in Switch To setting.	Alarm, Signal, Timer
Alarm (Signal or Timer)	Set which specific trigger will make the rear monitor switch from default setting. For example, ALM1 will make the rear monitor switch to the view selected in Switch To option for the duration of ALM1.	

2.2.2.2. Diagnostic Display



Figure 2-9 Diagnostic Display Menu

Table 2-6 Diagnostic Display Configuration Items

Menu Item	Description	Value [Default]
Voltage Display	Displays the system input voltage.	[On], Off
Time/Date Display	Show or hide the time/date display.	[On], Off
HDD Size Display	Displays the hard drive size.	[On], Off
% Full Display	Display the percentage of the hard drive space used.	[On], Off
Alarm Count Display	Show or hide the current alarm count (1 to 9). Alarm count resets to 0 when the DVR is restarted.	[On], Off
Internal Temperature Display	Display the ambient temperature inside the DVR.	[C Celsius] F Fahrenheit Off
Hard Drive Temperature: mn	Display the temperature inside the hard drive.	[C Celsius] F Fahrenheit Off

2.2.3. Alarms and Signals Menu

Use the Alarms and Signals menu to set the options and events that occur when an external alarm is received by the DVR. Usually, a driver-activated switch or other external device causes the alarm.



Figure 2-10 Alarms and Signals Menu

2.2.3.1. Alarm Settings

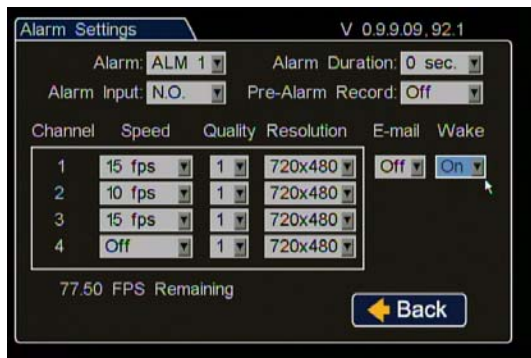


Figure 2-11 Alarm Settings Menu

Table 2-7 Alarm Settings Configuration Items

Menu Item	Description	Value [Default]
Alarm	ALM 1 is available on the MX4 basic system. ALM 1 to ALM 4 are available on the MX4 plus system with the Smart-Link module.	(ALM 1 to ALM 4)
Alarm Duration	The alarm duration is the length of time after an alarm has been received that the video is recorded at the alarm speed and quality.	0, [5], 10, 30 sec, 1, 3, 5, 10, 15, 20, 30, 45 min
Alarm Input	Set the alarm input to normally open or normally closed.	[N.O.], N.C.
Pre-Alarm Record	Set the DVR to record alarm data (trigger, time, duration, and pre-alarm time) with the alarm event.	[OFF], 5 sec, 10 sec
Per channel:		
Speed	Set the recording speed to the desired setting. A DVR usually records in a mode that conserves hard drive space, but increases video speed and quality for a short duration to record an alarm event.	Off, 1, 5, 7.5, 10, [15], 30 fps

Table 2-7 Alarm Settings Configuration Items

Menu Item	Description	Value [Default]
Quality	The DVR uses MPEG-4 video compression to extend the recording time on the media cartridge. See “Recording Capacity for Media Cartridge Storage” on page 2–16.	[1], 2, 3, 4
Resolution	Set the recording resolution to one of three different levels. The higher the recording resolution, the shorter the recording time on a media cartridge.	<ul style="list-style-type: none"> • [720 × 480] pixels • 720 × 240 • 360 × 240
E-mail	This feature requires network connectivity. Sends alarm information to a designated email receiver. Set email address in “E-mail Settings” on page 2–21.	[OFF], ON
Wake	Not available at this time.	OFF, [ON]

2.2.3.2. Signals 1 to 5

The MX4 supports five independent signals: LT (left turn signal), STP (stop), BRK (brake), WRN (warning lights), and RT (right turn signal). These signals can be used to indicate the status of an indicator, maximum 3 characters.



Figure 2-12 Signals 1 to 5 Menu

Table 2-8 Signals 1 to 5 Configuration Items

Menu Item	Description	Value [Default]
Signal 1	On screen display text for left turn signal.	LT (maximum 3 characters)
Signal 2	On screen display text for stop signal.	STP (maximum 3 characters)
Signal 3	On screen display text for brake signal.	BRK (maximum 3 characters)
Signal 4	On screen display text for warning lights signal.	WRN (maximum 3 characters)
Signal 5	On screen display text for right turn signal.	RT (maximum 3 characters)

Table 2-8 Signals 1 to 5 Configuration Items

Menu Item	Description	Value [Default]
Per signal row:		
Level	Indicates the activation level for the signal. <ul style="list-style-type: none"> If ACTIVE HIGH is selected, 12VDC applied to a signal causes the text to be displayed. If ACTIVE LOW is selected, 0VDC applied to a signal causes the text to be displayed. CAN gets a signal from CAN bus. 	[Active H] Active L CAN
Alarm	When the alarm setting is enabled, signals can trigger an alarm. See “Alarm Settings” on page 2–8.	[Off], ALM 1, ALM 2, ALM 3, ALM 4

2.2.3.3. Signals 6 to 10



Figure 2-13 Signals 6 to 10 Menu

Table 2-9 Signals 6 to 10 Configuration Items

Menu Item	Description	Value [Default]
Signal 6	On screen display text.	S06 (maximum 3 characters)
Signal 7		S07 (maximum 3 characters)
Signal 8		S08 (maximum 3 characters)
Signal 9		S09 (maximum 3 characters)
Signal 10		S10 (maximum 3 characters)
Per signal row:		
Level	Same as Signals 1 to 5	[Active H] Active L CAN
Alarm	The alarm input is available from the DVR back panel.	[Off], ALM 1, ALM 2, ALM 3, ALM 4

2.2.3.4. Speed Settings

The Speed menu lets you change the settings for recording speed data.



Figure 2-14 Speed Settings Menu

Table 2-10 Speed Settings Configuration Items

Menu Item	Description	Value [Default]
Speed Display	If vehicle speed is not being recorded, set to OFF. This turns off the 0 on the display, which indicates zero speed. If speed is being recorded, select the desired input type to obtain the speed: <ul style="list-style-type: none"> • a GPS receiver • a pulse counting input 	[Pulse], GPS
Speed Units	If the speed is being recorded from the GPS receiver or the CAN network, the desired speed display units must be selected. Selecting MPH converts the GPS signal to display speed in miles per hour.	[MPH], KPH, KTS
Speed Pulse Count	The DVR records vehicle speed by counting the number of pulses received either from a vehicle speed sensor or a vehicle Transmission Control Module (TCM). Calibrate the DVR to the vehicle's speed signal by driving for one mile in Calibration Mode. The DVR counts the pulses from the speed sensor and then converts a pulse rate into speed. Actual distance driven during calibration determines the unit of the speed. For example, to have speed recorded in MPH, drive for one mile in Calibration Mode. To have speed recorded in KPH, drive for one kilometer. The SPEED PULSE COUNT increments as the vehicle travels.	0
CALIBRATE	When calibrating speed, it is best to use known road markers to determine a mile, as reading the odometer may introduce errors. <ul style="list-style-type: none"> • Press Enter to begin calibration. • Press Menu to exit. 	

2.2.3.5. GPS Settings



Figure 2-15 GPS Settings Menu

Table 2-11 GPS Settings Configuration Items

Menu Item	Description	Value [Default]
GPS Display	Show or hide the GPS display. With a GPS module connected to the DVR, the latitude and longitude of the vehicle location are displayed.	[Off], On
GPS Time	Show or hide the GPS time.	[Off], On
UTC Reference	UTC is reference to the atomic clock standard in Greenwich, England. The DVR location is a certain time difference from UTC time. For example, Eastern Standard Time is -5 hours from UTC time. Pacific Standard time is -8 hours from UTC time. Determine your time difference from UTC time and select this time.	-12 [-8] to -1, 0, +1 to +12
Fencing (Geo-fencing) Alarm	Using GPS technology, geo-fencing lets the Administrator set a designated geographic radius. If the vehicle deviates from this area, the DVR will provide an alarm. Enable or disable the fencing alarm to record an alarm or not.	Off, ALM 1, ALM 2, ALM 3, ALM 4
Coordinate Style	Set to a circle or rectangle and dynamic prompts for LAT and LONG appear.	[Circle], Rectangle
Circle Center: LAT	Set the latitude.	[0 0 0 0 N] S
Circle Center: LONG	Set the longitude.	[0 0 0 0 E] W
Distance	If coordinate style is circle, this option defines the radius.	1 to 999
units	Set the units in miles or kilometers.	[Miles] KM

2.2.4. Recording Settings Menu

Use the Recording Settings menu to set the resolution, camera speed in frames per second (FPS), image quality, Record Delay-On and Record Delay-Off times, and other recording options.

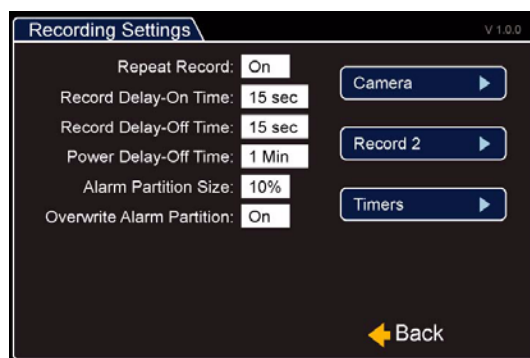


Figure 2-16 Recording Settings Menu

Table 2-12 Record Configuration Items

Menu Item	Description	Value [Default]
Repeat Record	Enables recording over older video data once the media cartridge is full.	[ON], OFF
Record Delay-On Time	Enables a time delay after switched power to the DVR is turned on.	[Off], 30 sec, 1, 5, 10, 20, 30, 45, 60 min
Record Delay-Off Time	Enables a time delay to continue recording after the switched power to the DVR is turned off.	0, [15], 30 sec, 1, 5, 10, 20, 30, 45, 60 min
Power Delay-Off Time	Enables a time delay after record delay-off time expires to keep the DVR on but not recording. The control connector on the DVR back panel remains active to allow peripherals such as Smart-Reach to be powered up during the power delay time.	0, [15], 30 sec, 1, 5, 10, 20, 30, 45, 60 min, 2, 4 hour
Alarm Partition Size	Enables a portion of the media cartridge to be reserved for alarm data that needs to be protected and not erased by the Repeat Record function.	[Off], 10, 20, 30, 40%
Overwrite Alarm Partition	Enables recording over older protected alarms once the alarm partition is full.	[OFF], ON

2.2.4.1. Camera Settings

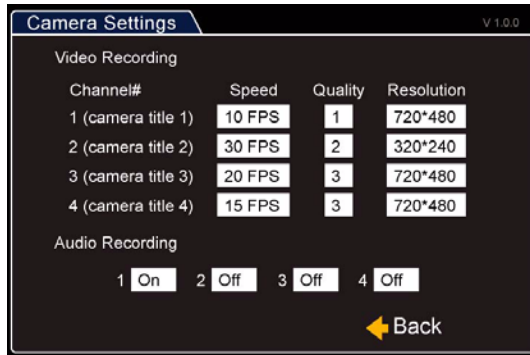


Figure 2-17 Camera Settings Menu

Table 2-13 Camera Settings Configuration Items

Menu Item	Description	Value [Default]
Per camera row:		
Speed	Set the camera frame rate.	Off, 1, 5, 7.5, [10], 15, 30 FPS
Quality	Set the picture quality option. The DVR uses MPEG-4 video compression to extend the recording time on the media cartridge. See Estimated Recording Time tables on page 2–16.	1, 2, [3], 4
Resolution	Set the recording resolution. The higher the recording resolution, the shorter the recording time on the media cartridge.	720 × 480 [720 × 240] 360 × 240
Audio Recording 1	Enables audio recording for the input channel.	Off, [On]
Audio Recording 2		Off, [On]
Audio Recording 3		Off, [On]
Audio Recording 4		Off, [On]

2.2.4.2. Record 2 Settings

Built-in dual technology allows the recording of two information streams, one designed for high resolution playback on a PC, and the other for real-time viewing over the Web or GPRS network. In the event of an emergency, access the video on-line with a cell phone or PDA via your cell network plan to assess the situation.

The settings for normal are less than the highest setting for speed and quality if dual stream recording is used.

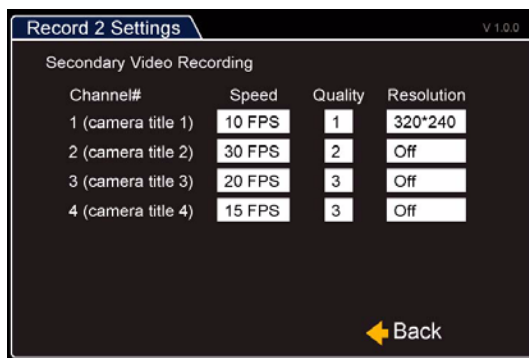


Figure 2-18 Record 2 Settings Menu

Table 2-14 Record 2 Settings Configuration Items

Menu Item	Description	Value [Default]
Per camera row:		
Speed	Set the camera frame rate.	Off, 1, 5, 7.5, [10], 15, 30 FPS
Quality	Set the picture quality option. The DVR uses MPEG-4 video compression to extend the recording time on the media cartridge. See Estimated Recording Time tables on page 2-16.	1, 2, [3], 4
Resolution	Set the recording resolution. the higher the recording resolution, the shorter the recording time on a media cartridge.	720 × 480 [720 × 240] 360 × 240

2.2.4.3. Timers Settings

Use the Timer Settings menu to change the timer schedules to meet different vehicle route requirements. The DVR supports ten independent timers that can be used to control when and how the DVR records.



Figure 2-19 Timer Settings Menu

Table 2-15 Timer Settings 1-5 (identical for Timer 6 to 10)

Menu Item	Description	Value [Default]
Enable Timers	Enables preset times for recording.	On, [Off]
Per timer row TIMER 1–10		
Day	Set the timer to record on a specific day, daily, every weekday, or only on the weekend.	DLY, [WDY], WND, SUN, MON, TUE, WED, THU, FRI, SAT
Start	Set in 12-hour in the TIME/DATE menu. Avoid overlapping the Start and End time. Set in 24-hour format.	<ul style="list-style-type: none"> [12:00 AM] to 11:59P for 12 HR format 00:00 to 23:59 for 24 HR format
End	Set in 12-hour format. Set in 24-hour format.	<ul style="list-style-type: none"> [12:00 AM] to 11:59P for 12 HR format 00:00 to 23:59 for 24 HR format
Set	Set to ON enables the timer. Set to OFF turns the timer off.	[Off], On

2.2.5. Recording Capacity for Media Cartridge Storage

The MX4 uses MPEG-4 video compression to extend the recording time on the media cartridge. The recording time varies, depending on the settings for frames per second (speed), resolution (pixel count), and picture quality.

The picture quality setting determines the amount a picture is compressed versus the amount of memory the picture takes up on the media cartridge.

- Setting 1 is the standard quality—a lower picture quality means higher compression and a lower memory requirement.
- Setting 4 is the highest picture quality—a higher picture quality means lower compression and a higher memory requirement.

Table 2-16 to Table 2-17 show the estimated recording time in hours for media cartridges at the different settings for frames per second (FPS), picture quality, and resolution. The settings are for a single camera.

Important: The average image size is dependent on the scene content and the lighting conditions. Your actual recording times may vary.

Table 2-16 Estimated Recording Time in Hours with 160 GB Media Cartridge

Frames per second (FPS)	Picture Quality and Resolution								
	1 360x240	3 360x240	4 360x240	1 720x240	3 720x240	4 720x240	1 720x480	3 720x480	4 720x480
30	1270	894	521	769	395	223	479	250	141
15	2642	1860	1084	1900	976	551	1123	586	331
10	3294	2319	1351	2064	1060	598	1207	630	355
5	6313	4444	2590	4793	2462	1390	2713	1416	799
1	20000	14079	8205	12308	6322	3569	5517	2879	1624

Table 2-17 Estimated Recording Time in Hours with 500 GB Media Cartridge

Frames per second (FPS)	Picture Quality and Resolution								
	1 360x240	3 360x240	4 360x240	1 720x240	3 720x240	4 720x240	1 720x480	3 720x480	4 720x480
30	3969	2794	1628	2403	1234	697	1497	781	441
15	8257	5813	3387	5938	3050	1722	3509	1831	1033
10	10295	7247	4223	6449	3313	1870	3772	1969	1110
5	19728	13888	8093	14978	7694	4344	8478	4425	2496
1	62500	43996	25640	38463	19756	11154	17241	8998	5075

2.2.6. Network Settings Menu

The MX4 Plus DVR has a built-in Ethernet interface for connecting to a computer or the Smart-Reach Mobile wireless bridge equipment. (See Figure 1-6, “Typical Plus System” on page 1–7.)

To connect using the network connection, each host (computer) connected to the network must have a unique IP address. A qualified IT administrator is required to provide information about the network settings and to configure the Network settings, DDNS settings, and E-mail settings.

Important: To perform any additional configuration, assign an IP address, reset the Smart-Reach Mobile wireless bridge or operating information, contact Customer Service.

Use the Network settings menu to set the network communication parameters necessary to use the Smart-Reach Mobile wireless bridge equipment and Ethernet on the MX4 Plus DVR.

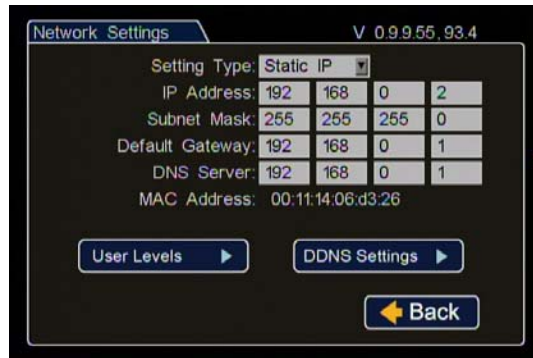


Figure 2-20 Network Settings Menu

Table 2-18 Network Settings Configuration Items

Menu Item	Description	Value [Default]
Setting Type	For network settings, consult your IT administrator to configure the setting type and IP address. If DHCP is used, the subnet mask, default gateway and DNS server are configured automatically.	<ul style="list-style-type: none"> [Off] Static IP: a permanent address on the Internet assigned by the Internet Service Provider. DHCP (Dynamic Host Configuration Protocol) automates the assignment of IP addresses in a network.
IP Address		
Subnet Mask	Uses a dot address beginning with 255 and composed of four octets separated by decimals to determine which network you belong to.	
Default Gateway	Gateway address uniquely identifies a host or computer on the LAN which assigns the IP addresses to your network. Uses a dot address composed of four octets separated by decimals.	
DNS Server	See “DDNS (Dynamic Domain Name Server) Settings” on page 2–19.	
MAC (Media Access Control) Address (fixed)	Your computer’s unique hardware number.	00:11:14:06:d3:1b

2.2.6.1. User Levels



Figure 2-21 User Levels Menu

Table 2-19 User Levels Configuration Items

Menu Item	Description	Value [Default]
User 1 (User 2 to 6)		
Name	Six user names can be programmed to have remote access to the DVR.	[Administrator] for User 1 [Blank] for User 2 to 6 (maximum 8 characters)
Password	Set the password for each individual user.	Maximum 8 characters
Level	Each user is assigned a specific access level. Three levels are supported. <ul style="list-style-type: none"> Playback allows the user to playback recorded and view live video only. Configure allows the user playback rights plus DVR configuration. Administrator allows user full rights to the DVR setting. 	[Administrator] for User 1 [Playback] for User 2 to 6

2.2.6.2. DDNS (Dynamic Domain Name Server) Settings



Figure 2-22 DDNS Settings Menu

Table 2-20 DDNS Settings Configuration Items

Menu Item	Description	Value [Default]
DDNS (Dynamic Domain Name Server)	Set the server name.	Maximum 64 characters.
User Name	Set the user name.	Maximum 32 characters.
Password	Set the password.	Maximum 32 characters.
Record ID	This is typically a numeric string.	Maximum 16 characters.
FQDN Host Name	The fully qualified domain name for the host.	Maximum 64 characters.

2.2.7. System Settings Menu

The System Settings menu allows control of system level settings and functions that should only be accessed by authorized individuals.



Figure 2-23 System Settings Menu

Table 2-21 System Settings Configuration Items

Menu Item	Description	Value [Default]
Disk Full	Set to receive e-mail notification when the disk is full.	[E-mail]
HD Failure	Set to receive e-mail notification if the hard drive fails.	[E-mail]
Password Enable	Set to ON, the STOP/TEMP PWR button on the DVR is locked out and requires a password.	On, [Off]
Password	The password is maximum eight digits.	00000000 to 99999999 [11111111]
Audio Output Channel	Select the audio output channel.	[1], 2, 3, 4

2.2.7.1. Program Update



Figure 2-24 Program Update Menu

Table 2-22 Program Update Configuration Items

Menu Item	Description	Value [Default]
Load Configuration	Load the configuration settings from a USB device. MEM1 and MEM2 are customized configuration settings.	[Default] MEM1 MEM2
Store Current Configuration	Store the DVR configuration settings to a USB device.	[USB Device] MEM1 MEM2
File Name	Set the file name.	1 to 4 characters [SEO1]
Load	Load the new DVR configuration settings.	
Store	Store the DVR's configuration to a USB device.	
Update	Upgrade the firmware. See "Updating the Firmware" on page 2-23.	
Format	Format the hard drive.	

2.2.7.2. E-mail Settings

The E-mail Settings feature requires network connectivity. See "Network Settings Menu" on page 2-17.

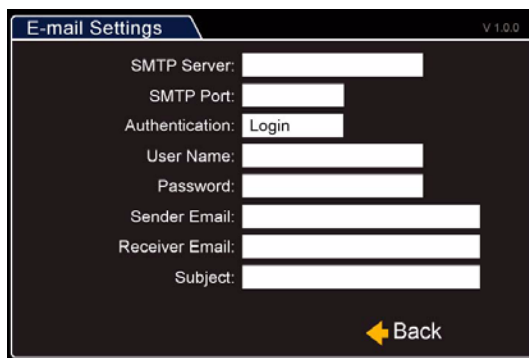


Figure 2-25 Email Settings

Table 2-23 Email Settings Configuration Items

Menu Item	Description	Value [Default]
SMTP Server	Set the server name.	Maximum 32 characters
SMTP Port	Set the SMTP port.	1 through 9999 [25]
Authentication	Set the authentication.	None, [Login]
User Name	Set the user name.	Maximum 32 characters
Password	Set the password.	Maximum 32 characters
Sender	Set the sender e-mail.	Maximum 64 characters
Receiver	Set the receiver e-mail.	Maximum 32 characters
Subject	Set the subject.	Maximum 32 characters

2.2.7.3. One Touch Settings

Use the **One-Touch** button without a video monitor.

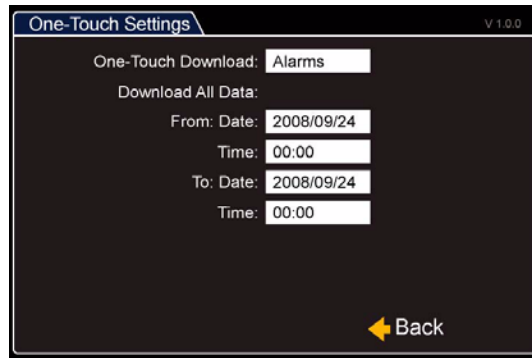


Figure 2-26 One Touch Settings Menu

Table 2-24 One-Touch Setting Configuration Items

Menu Item	Description	Value [Default]
One-Touch Download	See “Using One-Touch Download” on page 3–8.	<ul style="list-style-type: none"> • [ALARMS] • TODAY • TIME
From Date	Set the month, day, and year.	01/01/2009
From Time	Set the time 12 AM to 11 PM for 12 hour format and 00 to 23 for 24 hour format.	12:00 AM
To Date	Set the month, day, and year.	01/01/2009
To Time	Set the time 12 AM to 11 PM for 12 hour format and 00 to 23 for 24 hour format.	12:10 AM

2.2.8. Updating the Firmware

The firmware version is displayed on the top right corner of every menu. The firmware update must be obtained from Seon Design. To install a firmware update, a USB memory device must be formatted from a Windows®-based computer using the FAT file format. Load the Program Update file onto the USB memory device.



CAUTION: Equipment damage

Do not use temporary power mode to power up the DVR for a firmware update.
Do not remove switched and constant power while updating the DVR firmware.

To install a firmware update on the MX4:

1. Power up the DVR using the vehicle ignition.
2. Insert the USB memory device with the new firmware version into a USB port on the DVR.
3. After the DVR has started, go to the System Settings menu > Program Update > Update.



Figure 2-27 Updating DVR Firmware Dialog Box

A window appears asking if you wish to update the DVR firmware.

4. Click **Yes** to proceed or **No** to cancel.
5. Once the update is finished, the DVR will automatically restart.

Important: On restarting, the DVR will take up to 3 minutes to load as it completes the upgrade process. Wait until the DVR finishes loading.

6. Remove the USB memory device.

CHAPTER 3

Operation

This chapter provides information and procedures for operating the MX4.

3.1. Operating and Monitoring the DVR

The DVR front panel provides buttons, connectors, and status indicators for operating and monitoring the status of the DVR.

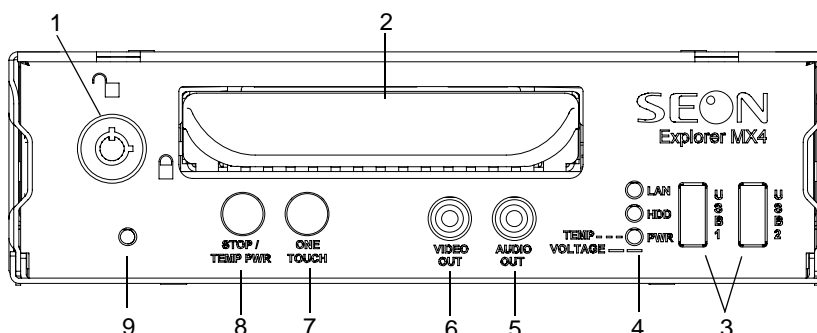


Figure 3-1 MX4 Front Panel

Table 3-1 Front Panel Features

Item	Feature	Description
1	MEDIA CARTRIDGE (HARD DRIVE) LOCK	<ul style="list-style-type: none"> Requires the media cartridge key to remove and lock the media cartridge. When the DVR is recording, press the STOP/TEMP PWR button before unlocking and removing the media cartridge.
2	MEDIA CARTRIDGE	Remove the media cartridge to a separate location for playback using the Media Cartridge Reader connected to a PC. See “Removing and Replacing the Media Cartridge” on page 3–2 and Figure 3-1 on page 3–3.
3	USB1, USB2 PORTS	Supports USB devices for: <ul style="list-style-type: none"> Copying video and audio information. Exporting video clips. Updating the DVR firmware. Importing/exporting. Connecting the trackball mouse.
4	LAN ACTIVITY (green)	Illuminates when there is network activity on local area network connection.
5	HDD ACTIVITY (red)	Illuminates when the DVR is accessing the media cartridge.
6	PWR indicator (green) TEMP VOLTAGE	Illuminates when the DVR is powered on. Flashes quickly when the DVR cannot power up due to temperature limitations. Flashes slowly when the DVR cannot power up due to voltage limitations.

Table 3-1 Front Panel Features

Item	Feature	Description
7	AUDIO OUT (red)	Audio output RCA jack
8	VIDEO OUT (yellow)	Video output RCA jack for configuring the DVR.
9	ONE TOUCH	Press to start ONE TOUCH downloading to portable media installed in USB port. See “Using One-Touch Download” on page 3–8.
10	STOP/TEMP PWR (red button)	<ul style="list-style-type: none"> • Power-on the DVR temporarily if held for more than 5 seconds. • Power down the DVR if held for more than 5 seconds when the DVR is in temporary power mode, or in shutdown sequence. • Press the STOP button to stop the DVR from recording or playing.
11	INFRARED (IR) RECEIVER	Use with the remote control pointed at the receiver.

3.2. Removing and Replacing the Media Cartridge

The DVR has a removable media cartridge that is contained in a media cartridge tray. A media cartridge lock secures the cartridge during operation. Use the media cartridge key to lock and unlock the media cartridge.



CAUTION

Do not remove the media cartridge until the red HDD activity indicator is OFF. Failure to do so may result in lost data.

Important: While the media cartridge is hot swappable, (the media cartridge can be removed when the DVR is powered up), do not remove the media cartridge while the DVR is recording, as the video segment may not be recorded. Press the **STOP/TEMP/PWR** button before unlocking and removing the media cartridge.

To remove the media cartridge:

1. Insert the media cartridge key.
2. Press **STOP/TEMP/PWR** button.
3. Use the media cartridge key to unlock the media cartridge. Turn counter clockwise by ¼ turn until the drive lock is in the unlocked position.
4. Gently pull out the media cartridge only after the red HDD activity indicator is not illuminated.

To install the media cartridge:

1. Slide in a media cartridge until the cartridge seats inside the front panel.
2. Insert the media cartridge key, turn clockwise by ¼ turn until the drive lock is in the locked position.

3.3. Viewing Recorded Video

View the video recorded on the MX4 by using one of three methods:

- Local playback with a monitor attached to the MX4 DVR (see Figure 3-1) using the trackball mouse or remote control. For information on the trackball mouse, see page 1–4. For information on the remote control, see page 1–4.
- Web browser user interface with Ethernet connectivity on a laptop.
- Removing the media cartridge and using the Media Cartridge Reader and vMax software. The vMax with Tracking software provides the most functionality for viewing, editing, and archiving video. See the *vMax Video Management Software User Guide*, document part number 700-0036.

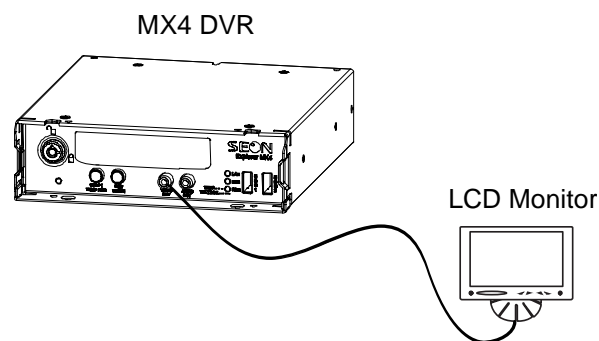


Figure 3-1 Local Playback of Video using Monitor Attached to the DVR

3.3.1. Playback Menu

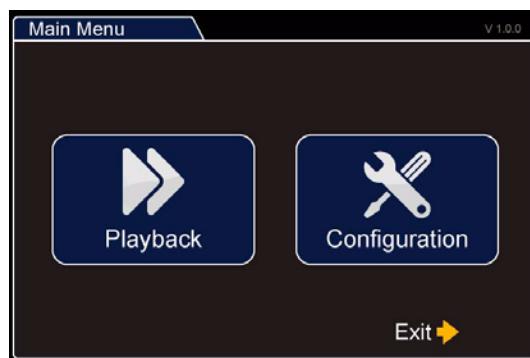













Figure 3-2 Main Menu



Figure 3-3 Playback Tool Bar Window

Table 3-2 Playback Tool Bar Items


Tool Bar Icon		Description
	Start of clip/End of clip	Click to set the start of clip and end of clip points for Archiving. See page 3–6.
	Search	Click to search by date, time or by Time, Alarm, Signals, or System Event.
	Archive	Click to display Archive window to save a video clip to USB.
	Fast Rewind	Click to reverse during playback or with playback paused, each click reverses the video by one frame.
	Play/Pause	Click to start playback. Click again to pause playback.
	Fast Forward	Click to fast forward during playback, or with playback pause, each click on fast forward advances the video by one frame.
	Individual camera/Quad view	Click to display Camera 1, 2, 3, 4 or quad view.
	Audio	Click to cycle through Audio 1, 2, 3 or 4.
	Metadata Text overlay	Click to turn on text overlay: temperature, system voltage, GPS data (if recorded), speed, date and time.
	Show/Hide Playback tool bar	Click to show or hide the playback tool bar.
	Exit	Click to exit to on-screen display.

3.4. Using the Search Function

The MX4 includes a powerful search function that lets you quickly find recorded information by Date and Time, Alarm, Signals, and by System Event.

To view the Search menu:

1. From the Main Menu, click on Playback and press **Enter**. See Figure 3-2.

2. Click on the Show/Hide toolbar icon  in the center of the window.

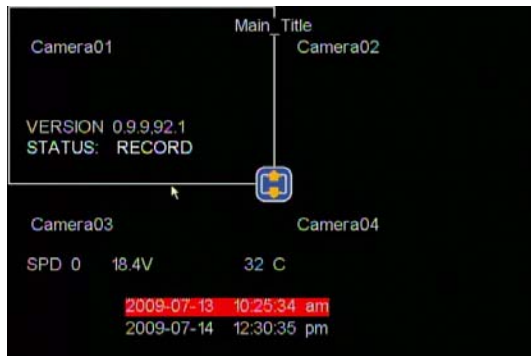


Figure 3-4 Show/Hide Toolbar Icon

The playback tool bar appears. See Figure 3-3.

3. Click on the Search  icon.

The Search menu appears as shown in Figure 3-5. The items appearing in the dialog box will depend on the item selected in Search Only box.



Figure 3-5 Search Menu

Table 3-3 Search Configuration Items

Menu Item	Description	Value [Default]
Start Date	Set the start date for the search.	
Time	Set the start time for the search.	

Table 3-3 Search Configuration Items

Menu Item	Description	Value [Default]
End Date	Set the end date for the search	
Time	Set the end time for the search.	
Search Only	Select the desired search type.	<ul style="list-style-type: none"> • [Time] • Alarm • Signals • System Event
System Event	Select the desired system event.	<ul style="list-style-type: none"> • <i>An</i> Alarm event, <i>n</i> = alarm input • <i>Dn</i> Media cartridge over temperature warning, <i>n</i> = disk number • GPS Geo fencing event has occurred • <i>LH</i> Logical head: beginning of recording date and time after media cartridge has been overwritten • <i>LUn</i> Logical user login <i>n</i> = 1 is Administrator, 2 is Operator, 3 is General • <i>PH</i> Physical head: Beginning point of hard disk space • <i>PL</i> Power loss • <i>RUn</i> Remote user login through HTTP, <i>n</i> = user level • <i>Sn</i> Signal, <i>n</i> = signal input • <i>Tn</i> Scheduled recording • <i>TN</i> • <i>Vn</i> Video loss, <i>n</i> =camera • All
Search	Press Enter to Start Search.	

3.5. Using the Archive Function

An archive dialog box lets you specify the start date and time and end date and time of the video clip to be archived to a USB memory device.

To view the Archive menu:

1. From the Main Menu, click on Playback and press **Enter**.



2. Click on the Show/Hide toolbar icon in the center of the window.

The playback tool bar appears.



3. Click on the Archive icon.

The Archive menu appears as shown in Figure 3-5. The items appearing in the dialog box depend on the item selected in the Filter By box.



Figure 3-6 Archive Menu


Table 3-4 Archive Configuration Items

Menu Item	Description	Value [Default]
Start Date	Set the start date (month, day, and year) for the clip.	
Time	Set the start time for the archive clip.	
End Date	Set the end date (month, day, and year) for the archive clip.	
Time	Set the end time for the archive clip.	
Filter By:	Filter recorded data by one of three types.	<ul style="list-style-type: none"> • Time • Alarm Data • Log File
Copy to USB	Click to archive the video clip to USB memory device.	

To establish an archive clip:


1. Use the video playback or search controls to view the start date and time of the video you want to archive.



2. Click start of clip icon  to set the start point of the archive clip.

3. Locate the end of the video you want to archive in Play mode, and click Pause.



4. Click end of clip icon  to set the end point of the archive clip.



5. Click on the Archive icon .

The Archive menu appears, as shown in Figure 3-6.

6. Click on Copy to USB.

3.5.1. Copy to USB

To copy video files to a USB memory device:

1. Insert a USB memory device into an open USB port on the DVR front panel.
2. Click on Copy to USB to start archiving.
A progress bar appears.
3. OR Click Cancel to stop the archiving process.
4. Remove the USB drive when complete and return to the Archive screen.



Figure 3-7 Copy to USB Progress Bar

3.6. Using One-Touch Download

Use the One-Touch download for downloading specific information to a USB drive via the USB port. One-Touch download is available when the DVR is in live, playback, or record mode. Use the **ONE TOUCH** button on the DVR or the copy button on the remote control.

Recommendation: To archive several minutes or hours of video, retrieving the media cartridge from the DVR and viewing the video playback via the vMax software is recommended.

To use the ONE-TOUCH download option:

1. Insert a USB drive into the USB port on the DVR front panel.
2. Configure the “One Touch Settings” on page 2–22, if necessary.
3. If the DVR is powered off, press the **STOP/TEMP POWER** button for 5 seconds to power up the DVR.
OR
4. Press the **ONE TOUCH** button to download information to the USB drive.
The status line of the on-screen display indicates **DOWNLOAD**.

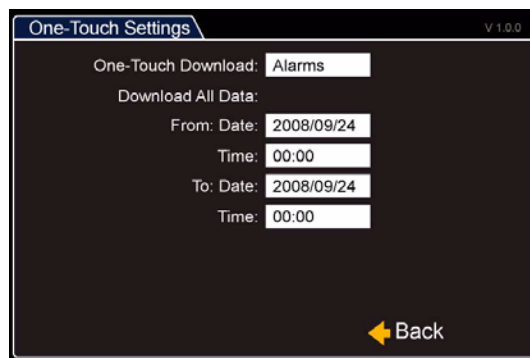


Figure 3-8 One-Touch Settings

Table 3-5 One-Touch Download Options

Item	Download...
ALARMS	All the alarms, starting with the newest alarms based on the date field settings.
TIME	All video from the end time backwards until the USB drive is full.
TODAY	All the video from the current time backwards until the USB drive is full.

- Remove the USB drive, and power the DVR off by pressing the **STOP/TEMP POWER** button for 3 seconds.

The DVR will power off automatically after 5 minutes.

CHAPTER 4

Maintenance and Return

Table 4-1 Maintenance Tasks

Tasks	What to do
Synchronizing the DVR Clock	It is recommended to synchronize the DVR clock every six months to ensure accurate video recording of the time and date. For setting the time and date, see “Time and Date Menu” on page 2–4.
Replacing the Remote Control Battery	Replace the CR 2025 battery with the same type of battery. <ol style="list-style-type: none"> 1. Press the tab on the back of the remote control. 2. Pull the battery compartment out, and remove the old battery. 3. Insert a new battery into the compartment with the positive side (+) facing up. Close the battery compartment.
Cleaning the Front Cover, Cable Cover, DVR	The MX4 DVR, front cover and cable covers are made from 18 gauge steel, coated with an outdoor powder paint, and only require periodic cleaning. To clean, use a damp cloth with a mild detergent. Do not allow water into the holes.
Cleaning the Camera and Window	Refer to the product documentation for cleaning the camera.
Replacing the Fan Filter	It is recommended to check the fan filter for excess dirt on a regular basis, and replace the filter when it restricts airflow. Failure to replace a blocked filter may result in the DVR shutting down on a hot day due to inadequate air circulation. Contact your dealer or Seon Design to obtain a replacement. <ol style="list-style-type: none"> 1. Remove the filter cover by gently prying it off with a small flat screwdriver. 2. Discard the used filter and place a new filter back into the filter holder. 3. Push the filter cover back into the holder and snap it into place.

**CAUTION: Equipment damage**

Do not remove the four screws holding the fan in place. Loose components inside the unit could cause internal damage.

4.1. Returning Product for Service

If any part of the MX4 is to be returned to Seon Design Inc. for service, contact Seon, provide the model and/or serial number of your unit, and ask for a Return Authorization (RA) number which allows the service technicians to track your product when it comes in for service. Please have the RA number clearly marked on the outside of the shipping box. **ANY PRODUCT SENT TO SEON DESIGN INC. WITHOUT AN RA NUMBER MAY BE REFUSED.**

The contact numbers for Seon Design Inc. are:

- Toll Free Telephone 1.877.630.7366
- Direct Telephone 604.941.0880

Please refer to the “Seon Design® Inc. Product Warranty” on page W-1 to review the terms of warranty service, contact, and shipping information, as well as other important issues regarding the service and operation of your system.

4.2. Troubleshooting the MX4

The MX4 is designed for high reliability of operation. If you have any problems with your system, however, read this chapter. If you cannot resolve the issue, contact Customer Service at Seon Design.

Symptom	Possible Cause and Solution
All problems.	<p>Many system problems are caused by issues with the power supplied to the DVR. Check the following:</p> <ul style="list-style-type: none"> • The voltage to the system may be too low. Check the voltage display (On or Off) Diagnostic Display. If the voltage display is turned OFF, go to the “Diagnostic Display” on page 2-7 and turn Voltage Display to ON. The voltage range should be between 8 to 32 VDC. • The power harness from the DVR must be connected as close to the battery as possible. Check the wiring to the battery. • Check the in-line fuses and fuse holders. If a fuse is blown, determine the cause before replacing it.
The DVR does not power on.	<ul style="list-style-type: none"> • Is the internal temperature below 40°F (4°C)? The TEMP LED on the front panel will be flashing. • Is the constant and switched power harness plugged into the DVR securely?
The DVR turns on but does not start recording.	<ul style="list-style-type: none"> • Check the ignition wiring from the power input harness. Is the yellow wire connected to an ignition switched circuit? • Is the media cartridge installed properly with the key in the locked position on the front panel? • Is the temperature below 40°F (4°C)? Check the temperature display on the main menu. See “Diagnostic Display” on page 2-7. Wait for the DVR to warm up and start recording. • Is the temperature above 122°F (50°C)? Check the temperature display on the main menu. • Check the battery voltage. • Check the settings for Record Delay-On time in the Record menu. See “Timers Settings” on page 2-15. • Are the timers on? See “Timers Settings” on page 2-15.
There is no picture on the video monitor output.	<ul style="list-style-type: none"> • Check the connections inside the camera, as well as the connections inside the DVR cable cover. • The voltage to the system may be too low, less than 8 VDC. If the status LED on the front panel is illuminated, the DVR is in low voltage.
The live camera picture is snowy, fuzzy, or grainy.	<ul style="list-style-type: none"> • Check all connections inside the camera. • Is the camera cable damaged? • Check the connections inside the DVR lock box. • Is the DVR power harness connected directly to the bus battery?
The playback picture is snowy, fuzzy, or grainy.	<ul style="list-style-type: none"> • Is the power input harness connected to the battery? • Check the video monitor cable attached to the front or back of the DVR.

Appendix A

Specifications

This appendix provides the product specifications for the Explorer MX4 Basic and Plus Mobile Digital Video Recording (DVR) System.

Note: Specifications are subject to change without notice.

A.1. Explorer MX4

Video Input/Output	75 Ohm NTSC video
Video Resolution	720 × 480 pixels, 720 × 240 pixels, 360 × 240 pixels
Video Compression	MPEG-4
Media Storage	Media cartridge, solid state
Media Cartridge Removal	Hot swappable, locking key-secured
Camera Input Connectors	6-pin Molex
Audio Input Level	-8 dBm
Audio Output Level	-6 dBm, 10 kOhm
Operating Temperature	-22°F to 122° F (-30°C to 50°C)
Storage Temperature	-40°F to 158°F (-40°C to 70°C)
Operating Humidity	0 to 95% relative humidity, non-condensing
Operating Voltage	8 to 32 VDC
Transient Protection	600 W per signal input
Temperature Protection	Advanced Smart-Temp
Power Harness Connector	4-pin Molex
Alarm Input Connector	2-pin Molex
Media Cartridge Dimensions (H × W × D)	0.83 × 3 × 5.1" (21 × 76 × 130 mm)
DVR Dimensions (H × W × D)	2 × 7 × 6.5" (51 × 178 × 165 mm)
DVR Weight	5.3 lb (2.4 kg) with front cover, cable cover
Fuses: Power Circuit and Ignition Circuit	5 A and 1 A
Ethernet	Gigabit

A.1.1. Advanced Smart-Temp™

Temperature inside DVR	Advanced Smart-Temp...
Below -4°F (-20°C)	DVR is not powered, although the media cartridge can still be removed from the DVR, heater is on. If the temperature falls below a preset value with the heater on, the DVR shuts down.
Above 149°F (65°C)	Shuts down the DVR to protect the media cartridge from damage.

A.1.2. Explorer MX4 Functional Features

Time Format	12-hour or 24-hour format
Date Format	MM-DD-YYYY, DD-MM-YYYY and YYYY-MM-DD
Camera Title	8 characters
Repeat Record	User selectable ON/OFF
Record Delay-On and Record Delay-Off	0 seconds to 60 minutes
Power Delay-Off	0 minutes to 4 hours
Daily Timers	10
Alarm	ALM1 is available for MX4 Basic. ALM1 to ALM4 are available for MX4 Plus with the Smart-Link™ module.
Playback Search	Date and Time, Ignition, Alarms, or All Events
Playback Speed	Image-by-Image, 1×, 2×, 4×, 8×, 16×, 32×, step
USB Memory Device	SanDisk Cruzer® Mini or equivalent

A.1.3. Explorer MX4 Front Cover, Cable Cover

Main Enclosure	18 GA cold rolled steel (CRS), powder coated black paint
Door Lock	Industrial cam lock, keyed alike.
Dimensions (H × W × D)	2 5/16 × 8 3/16 × 10 1/8" (59 × 208 × 257 mm).

A.1.4. Smart-Link™ Module

Power Harness Connector	4-pin Molex
Auxiliary Power Output Connector	2-pin Molex
GPS Input Connector	4-pin Molex
Signals Connector	6-pin Molex
CAN bus Network Connector	4-pin Molex
Serial Port/GPS	9-pin DB9
Alarm Input Connector	8-pin Molex
Indicator Panel Connector	5-pin Molex
Speed Input Connector	3-pin Molex
Dimensions (H × W × D)	5.875 × 3.25 × 0.875" (150 × 83 × 23 mm)
Weight and material	9 oz (255 g), steel, powder coated black pain

Legal Notice

Seon Design® Inc.

Seon Design Inc. is a specialist in the design and manufacture of video surveillance systems for mobile applications. Seon has been the preferred solutions provider for the pupil transportation industry since 1999. Today, we are proud that our success in this area has made us the leading manufacturer of mobile video surveillance systems in North America.

Contact Information

Seon Design Inc., Unit 111, 3B Burbidge Street, Coquitlam, BC Canada V3K 7B2

Telephone	604.941.0880	Toll Free Telephone	1.877.630.7366
Fax	604.941.0870	Toll Free Fax	1.866.664.3677
Email	sales@seon.com	Web site	www.seon.com

Seon Design Inc. Trademarks

Seon Design Inc. holds the following trademarks:

Rogue™, Rogue™ Plus, Explorer™, and Trooper® are registered trademarks of Seon Design Inc.

“Seon Design” is a registered trademark of Seon Design Inc. The Seon logo (**SEON**) is a registered trademark of Seon Design Inc.

In this User Manual there are references to trademarks, registered trademarks, and product names not owned by Seon Design Inc. that are the property of their respective owners. They are used in this User Manual for identification purposes only.

User Manual Revision

This is the August 2009 revision for this User Manual and is copyright, August 2009 of Seon Design Inc. All rights reserved.

Exclusion of Liability

SEON DESIGN INC.:

(a) MAKES NO REPRESENTATION, WARRANTY, GUARANTEE OR COVENANT, EXPRESS OR IMPLIED, AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN THIS USER MANUAL OR ANY OTHER USER OR OTHER MANUAL OR OTHER DOCUMENTATION PROVIDED BY SEON DESIGN INC. WITH RESPECT TO THE PRODUCT(S) DESCRIBED HEREIN, INCLUDING WITHOUT LIMITATION ANY DESCRIPTION OF GOODS OR SERVICES, SPECIFICATIONS, MODELS, DRAWINGS, OR DIAGRAMS.

(b) DOES NOT ASSUME AND SHALL NOT BE SUBJECT TO AND DISCLAIMS ANY AND ALL RESPONSIBILITY AND/OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES ARISING OUT OF BREACH OF CONTRACT OR OF WARRANTY, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHERWISE, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL OR CONTINGENT, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER’S RISK; AND

(c) EXPRESSLY DISCLOSES THAT IF THIS MANUAL IS WRITTEN IN ANY LANGUAGE OTHER THAN ENGLISH, THAT ALTHOUGH SEON DESIGN INC. HAS USED REASONABLE CARE TO MAINTAIN THE ACCURACY OF THE TRANSLATION FROM THE ENGLISH LANGUAGE, THE ACCURACY OF SUCH TRANSLATION IS NOT GUARANTEED OR WARRANTED BY SEON DESIGN INC. PLEASE REFER TO THE ENGLISH LANGUAGE VERSION OF THIS USER MANUAL FOR APPROVED SEON CONTENT. THE ENGLISH LANGUAGE VERSION IS AVAILABLE UPON REQUEST FROM THE SEON CUSTOMER SERVICE DEPARTMENT.

Please refer to the Seon Design Inc. Product Warranty applicable to the Product(s) described in this User Manual which exclusively sets forth Seon Design Inc.’s entire liability arising from or in connection with such product(s) and their use and the exclusive remedies available for purchasers and users thereof.

Document Part Number

This User Manual is valid for Seon Design Inc. Document Part Number 700-0075.

Printed in Canada

Seon Design® Inc. Product Warranty

Seon Design Inc. (Seon) warrants the cameras and components listed below against defects in workmanship and materials provided that such defects appear or are discovered within the respective periods specified below and provided further that the purchaser of such products notifies Seon of such defects within thirty (30) days of the appearance or discovery of such defects:

- Five (5) years from date of purchase parts and labor on the SA Wedge Camera Series
- One (1) year from date of purchase parts and labor on the SA-IR Illuminator
- Three (3) years from date of purchase parts and labor on all other Cameras
- One (1) year from date of purchase parts and labor on the Rogue™ Mobile DVR Systems
- Three (3) years from date of purchase parts and labor on the Explorer® MX4 Mobile DVR Systems
- Three (3) years from date of purchase parts and labor on the Trooper® TL2 Mobile DVR Systems
- Three (3) years from date of purchase parts and labor on the Trooper® TL4 Mobile DVR Systems
- One (1) year from date of purchase parts and labor on all other products and accessories

All service/replacement parts and repairs are warranted for a period of 90 days.

Subject to the terms and conditions listed below, during the relevant warranty period, Seon will repair, replace, or refund the purchase price for the defective product, whichever Seon considers to be appropriate in the circumstances, in Seon's sole and arbitrary opinion, free of charge, any defective products returned prepaid. In the event purchaser has a problem with any Seon product, please call and request a **RETURN AUTHORIZATION (RA) NUMBER** from the Service Department.

Please call 877-630-7366 or (604) 941-0880 and ask for the Service Department. Be sure to have the model number, serial number and the nature of the problem available for the customer service representative. Prior authorization **MUST** be obtained for all returns, exchanges, or credits. **ITEMS SHIPPED TO SEON WITHOUT A CLEARLY IDENTIFIED RA NUMBER MAY BE REFUSED.**

Products returned will be tested to verify the defect. Upon verification of the defect, the product will be repaired or exchanged, or the purchase price will be refunded or credited to the customer's account, at the sole option of Seon. In the event of replacement, the returned product will be credited to the customer's account and a new invoice issued for the replacement item. Seon reserves the right to refund the purchase price or to issue a credit only in lieu of replacement.

Seon may use new or refurbished replacement parts for repairing its products, at its sole and arbitrary discretion. Seon may replace an entire unit with an equivalent model, at its sole and arbitrary discretion. If a unit is exchanged, the returned product shall become the property of Seon and the exchange product becomes the property of the purchaser, and the remainder of the warranty that applied to the original unit purchased shall apply to the exchanged product. Exchange units may be new units or units that have been repaired to full factory specifications at Seon's discretion.

If the product is found to be in good working order or its inability to function properly is not covered by this warranty, the product will be returned in the same condition as received unless repair is possible and requested by the customer. Repairs of such nature will incur a charge for parts and labor and will proceed only by agreement with the customer to accept the charge.

This warranty shall not apply:

- (a) to equipment not supplied by Seon;
- (b) to equipment, including, any components, which shall have been operated in excess of rated capacity, subject to negligence, accident, or damage by circumstances beyond Seon's control, or to improper installation, operation, maintenance, servicing, alterations or storage, modification without Seon's written authorization, misuse, vandalism, fire, floods or acts of nature so as, in Seon's exclusive and arbitrary judgment, to affect the same adversely; or
- (c) if the serial number for the product has been altered in any way.
- (d) if the product has been operated outside of the specified Operating Environment specified in the Seon Users Manual for such product.

Disclaimer

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER REPRESENTATIONS, WARRANTIES, GUARANTEES AND CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE AND WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, SEON EXPRESSLY DISCLAIMS AND EXCLUDES ANY IMPLIED WARRANTY OF MERCHANTABILITY, DURABILITY OR FITNESS FOR PURPOSE AND ANY WARRANTIES OR MODIFIED WARRANTIES ARISING FROM USAGE OF TRADE OR COURSE OF DEALING.

Any description of the goods or services, whether in writing or made orally by Seon or Seon's agents, specifications, samples, models, bulletins, drawings, diagrams, engineering sheets or similar materials used in connection with customer's order are for the sole purpose of identifying the goods and/or services and shall not be construed as an express warranty. Any suggestions by Seon or Seon's agents regarding use, applications or suitability of the goods and/or services shall not be construed as an express warranty unless confirmed to be such in writing by Seon. Purchaser assumes full responsibility for selecting products to achieve purchaser's intended purposes, for properly installing and using those products, and for verifying the results obtained therefrom.

Seon Design® Inc. Product Warranty

PURCHASER'S EXCLUSIVE REMEDY AND SEON'S ENTIRE LIABILITY ARISING FROM OR IN CONNECTION WITH PURCHASER'S USE OF THE PRODUCTS AND/OR THIS AGREEMENT SHALL BE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS, OR REFUND OR CREDIT OF THE PURCHASE PRICE OF THE PRODUCTS AS SET FORTH ABOVE. SEON SHALL NOT BE SUBJECT TO AND DISCLAIMS: (A) ANY OTHER OBLIGATIONS OR LIABILITIES ARISING OUT OF BREACH OF CONTRACT OR OF WARRANTY, (B) ANY OBLIGATIONS WHATSOEVER ARISING FROM TORT CLAIMS (INCLUDING NEGLIGENCE, AND STRICT LIABILITY) OR ARISING UNDER OTHER THEORIES OF LAW WITH RESPECT TO GOODS SOLD OR SERVICES RENDERED BY SEON, OR ANY UNDERTAKINGS, ACTS OR OMISSIONS RELATING THERETO, AND (C) ALL CONSEQUENTIAL, INCIDENTAL, SPECIAL AND CONTINGENT DAMAGES WHATSOEVER, EVEN IF SEON HAS BEEN SPECIFICALLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Without limiting the generality of the foregoing, Seon specifically disclaims any liability for property or personal injury damages, penalties, special or punitive damages, damages for lost profits or revenues, loss of use of goods or any associated equipment, cost of capital, cost of substitute goods, facilities or services, down-time, shut-down or slow-down costs, or for any other types of economic loss, and for claims of customer's customers or any third party for any such damages. Some jurisdictions do not allow limitation or exclusion of incidental or consequential damages, so this limitation or exclusion may not apply to purchaser. In no event shall Seon's total liability for any damages to purchaser or any other person in connection with the products or this agreement exceed the lower of the suggested list price or the actual price paid for the products, regardless of whether such liability arises from contract, tort, warranty or any other form of claim.

If any provision of this agreement is found to be void, invalid, or unenforceable, that finding shall not affect the remaining provisions, all of which shall be enforced to the full extent permitted by law. If any remedy hereunder is determined to have failed of its essential purpose, the limitations of liability and exclusion of damages set forth above shall remain in full force and effect. This agreement may be modified only in writing signed by a duly authorized representative of Seon.

Provisions Applicable to American Customers

For those customers whose mailing address is in the United States, Seon's offer and any agreement of sale resulting therefrom shall be governed by and construed in accordance with the internal and domestic laws of the State of WASHINGTON without giving effect to the conflict of laws rules thereof. The Superior Court of Washington for Whatcom County and U.S. District Court for the Western District of Washington ("the U.S. Closed Courts") shall have exclusive jurisdiction to entertain and determine all disputes and claims, whether for specific performance, injunction, declaration or otherwise arising out of or in any way connected with the construction, breach, or alleged, threatened or anticipated breach of the contract resulting from this offer and shall have jurisdiction to hear and determine all questions as to the validity, existence or enforceability thereof. Customer specifically consents to such Court's exercise of jurisdiction over it. The purchaser attorns to the exclusive jurisdictions of the jurisdiction of the U.S. Closed Courts, waives any obligation to venue in any action or proceeding regarding Seon Products and waives any objection that the U.S. Closed Courts are an inconvenient forum or do not have jurisdiction over the purchaser of Seon. The United Nations Convention On Contracts For The International Sale Of Goods shall not apply.

Provisions Applicable to Canadian Customers

For those customers whose mailing address is in Canada, Seon's offer and any agreement of sale resulting therefrom shall be governed by and construed in accordance with the internal and domestic laws of the Province of BRITISH COLUMBIA and the laws of Canada applicable therein without giving effect to the conflict of laws rules thereof. The courts of British Columbia (the "Canadian Closed Courts") shall have exclusive jurisdiction to entertain and determine all disputes and claims, whether for specific performance, injunction, declaration or otherwise arising out of or in any way connected with the construction, breach, or alleged, threatened or anticipated breach of the contract resulting from this offer and shall have jurisdiction to hear and determine all questions as to the validity, existence or enforceability thereof. The purchaser attorns to the exclusive jurisdictions of the jurisdiction of the Canadian Closed Courts, waives any obligation to venue in any action or proceeding regarding Seon Products and waives any objection that the Canadian Closed Courts are an inconvenient forum or do not have jurisdiction over the purchaser of Seon. The United Nations Convention On Contracts For The International Sale Of Goods shall not apply.

Seon Design Inc.
Unit 111, 3B Burbridge Street
Coquitlam, BC
Canada V3K 7B2

Telephone	604.941.0880
Toll Free Telephone	1.877.630.7366
Fax	604.941.0870
Toll Free Fax	1.866.664.3677
Email	sales@seon.com
Web site	www.seon.com